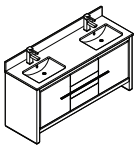

FVN8119

ALLIER

INSTALLATION GUIDE

FRESCA™

Mirror

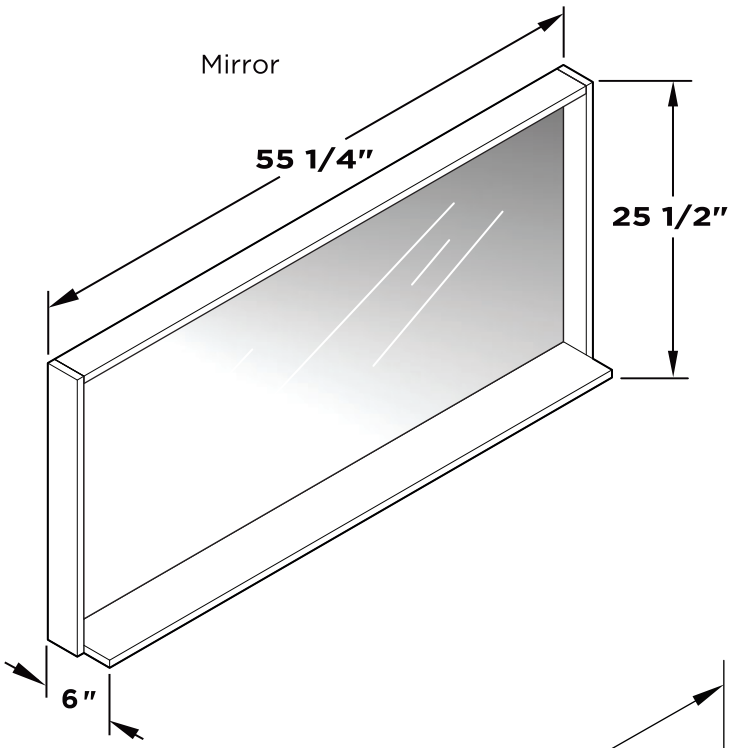

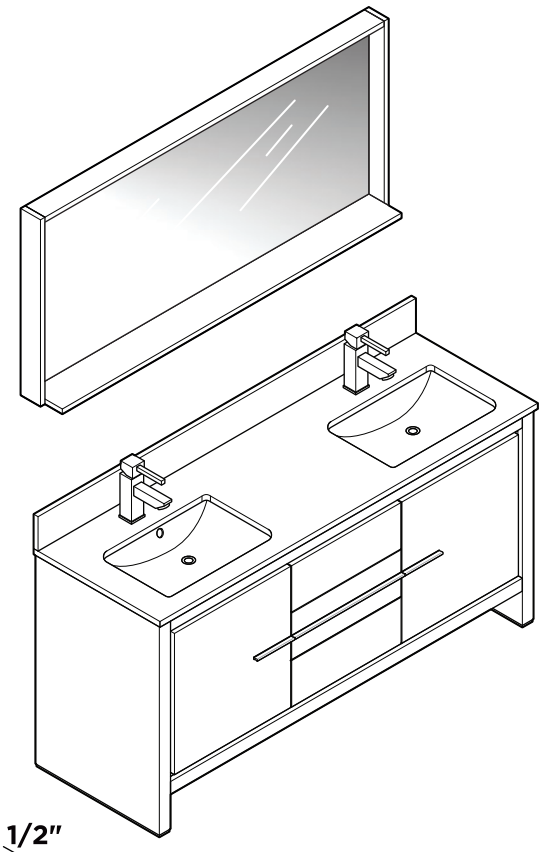

Vanity Front

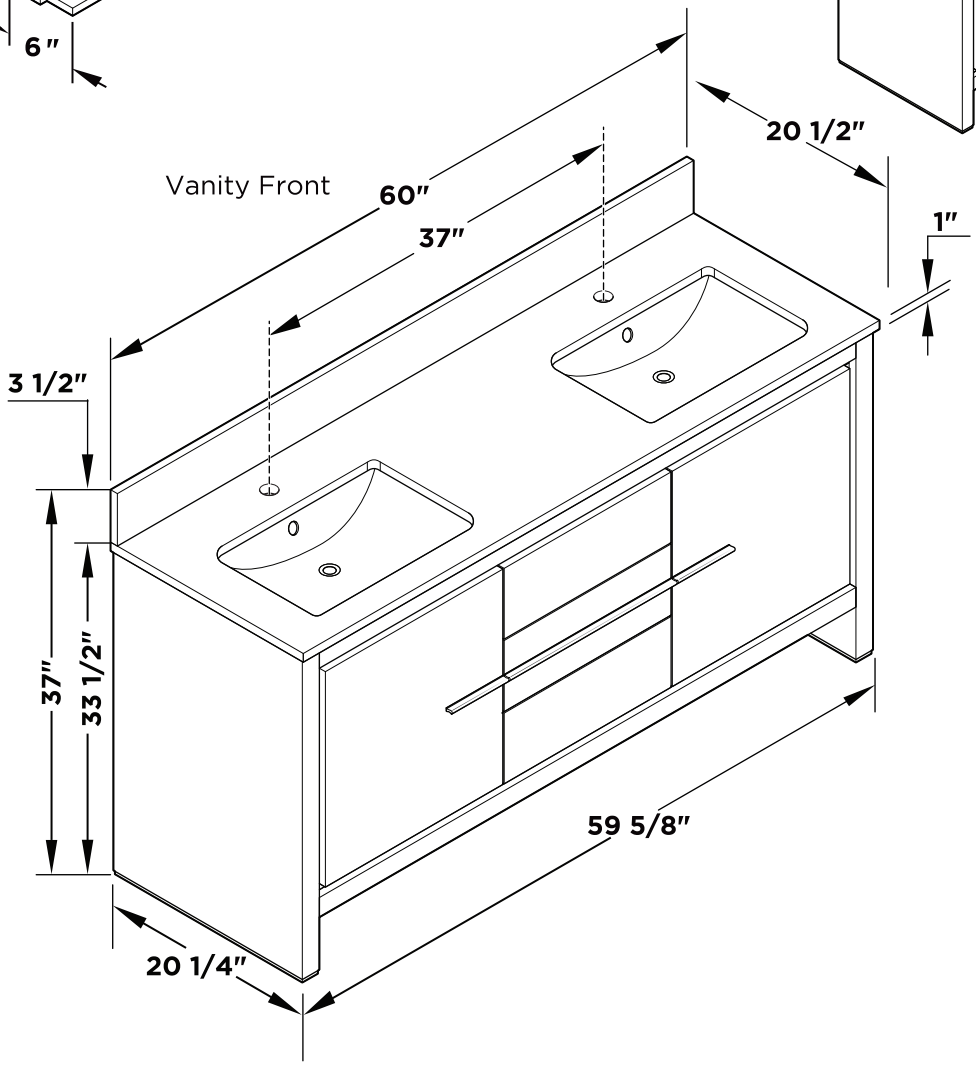

©2015 FRESCA ™ All rights reserved. This material may not be reproduced, displayed, modified or distributed without the express prior written permission of the copyright holder.

TOOLS FOR ASSEMBLY

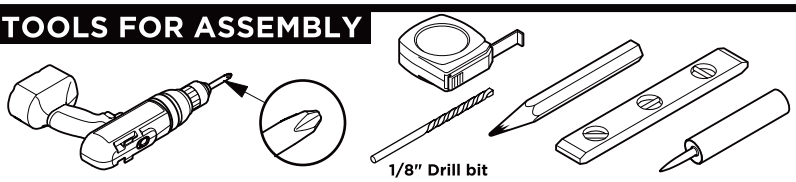

Vanity Back

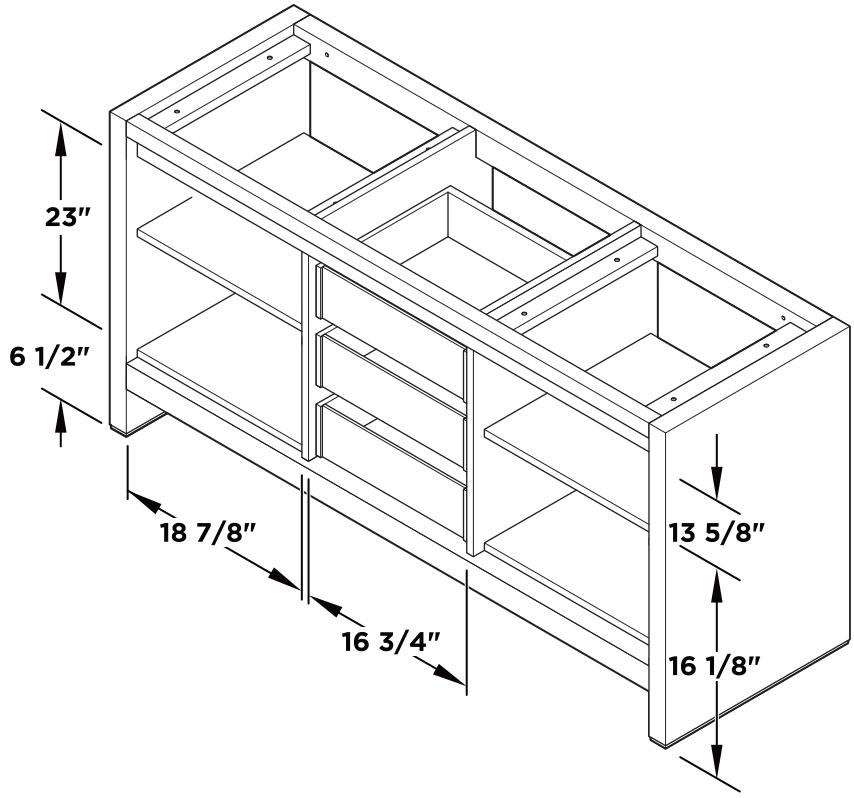

MIRROR INSTALLATION

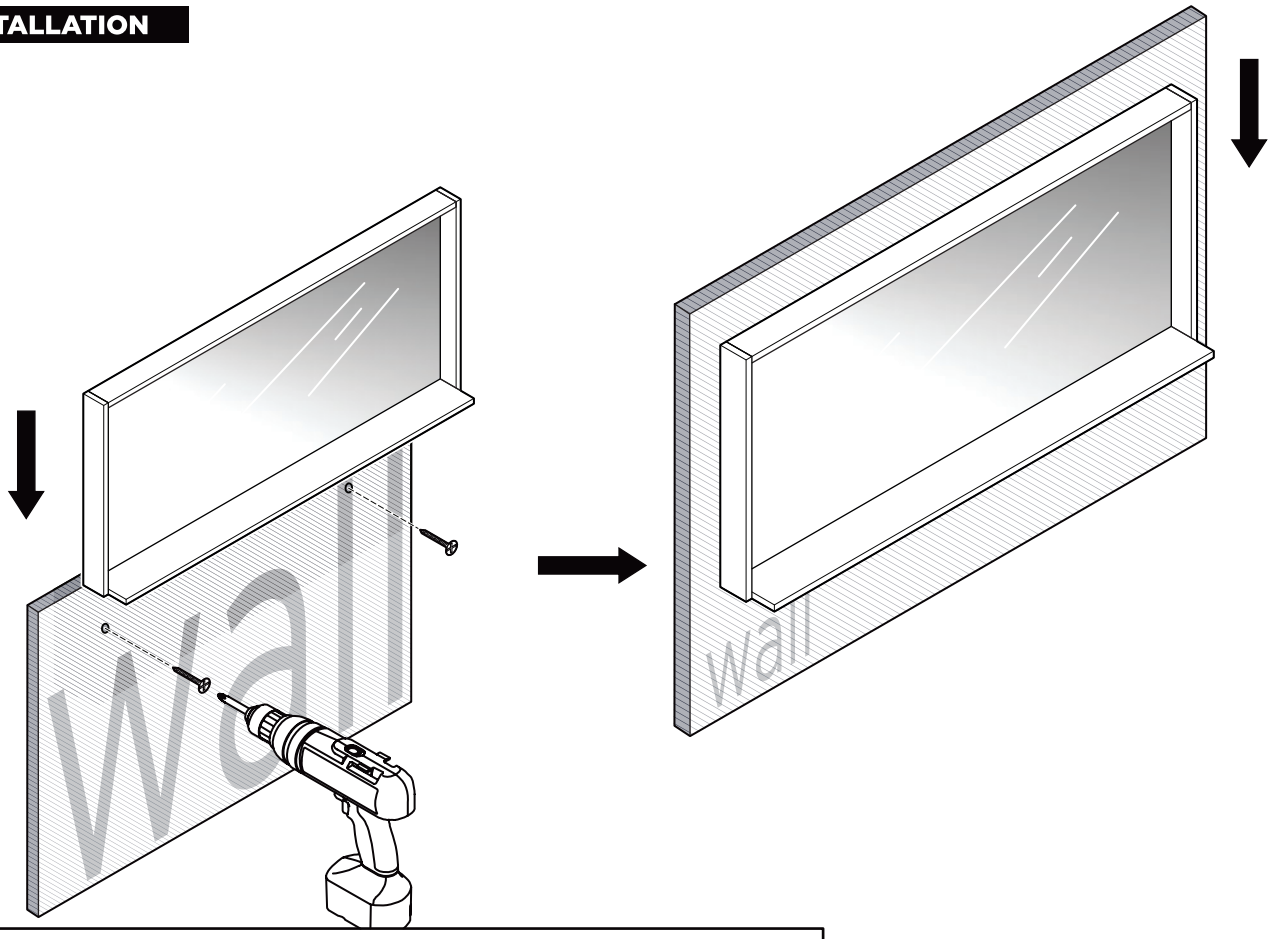

©2015 FRESCA ™ All rights reserved. This material may not be reproduced, displayed, modified or distributed without the express prior written permission of the copyright holder.

DRAWER REMOVAL & INSTALLATION

REMOVAL

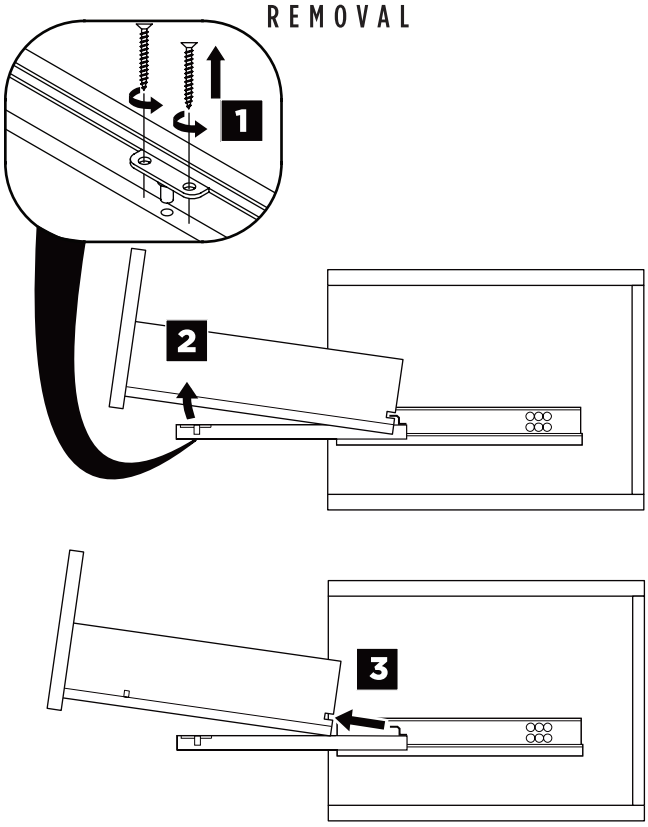

INSTALLATION

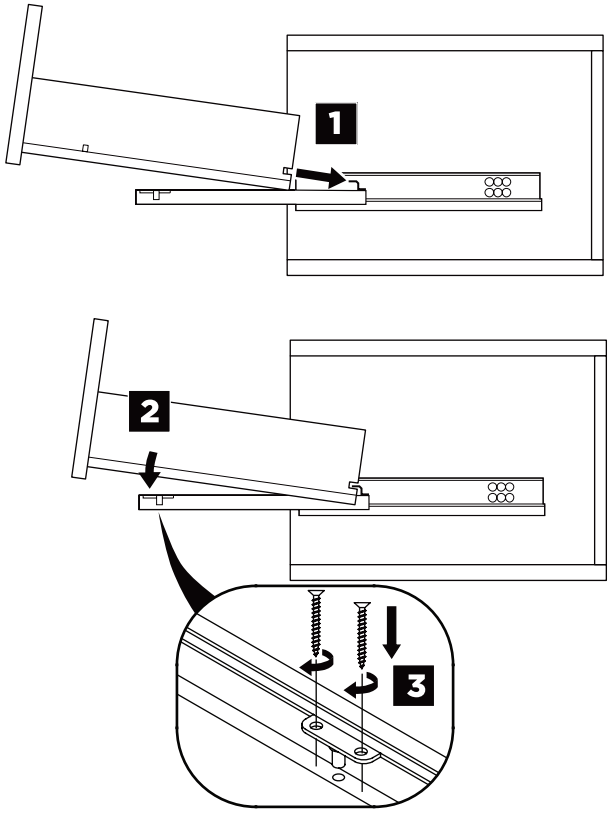

1 Attach Screws

IMPORTANT:

Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided **do not attach** to all wall construction types.

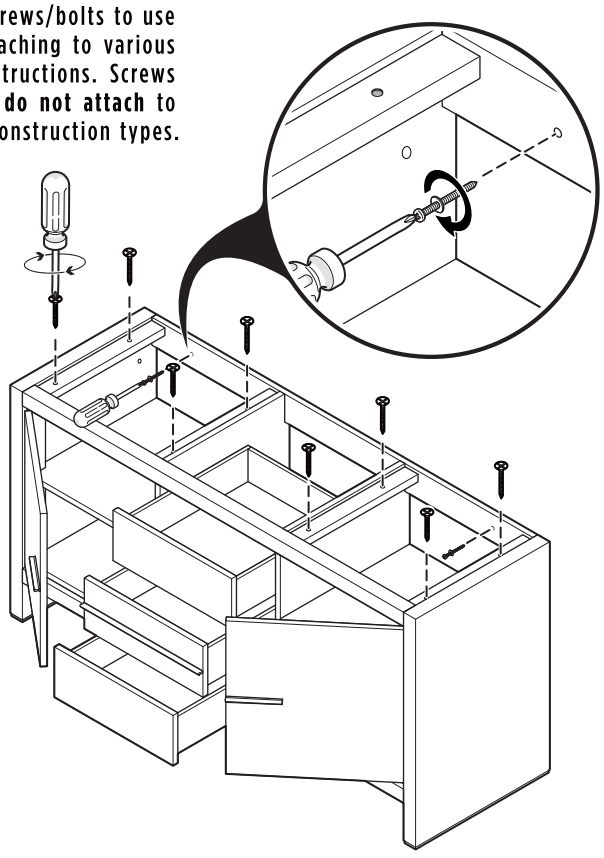

2 Install Sinks

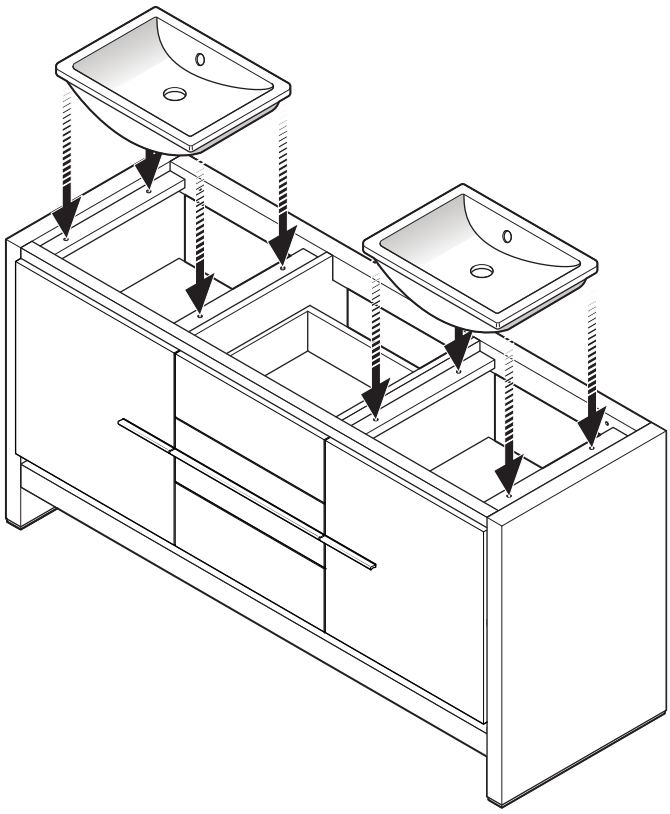

©2015 **FRESCA** ™ All rights reserved. This material may not be reproduced, displayed, modified or distributed without the express prior written permission of the copyright holder.

3 Install Countertop

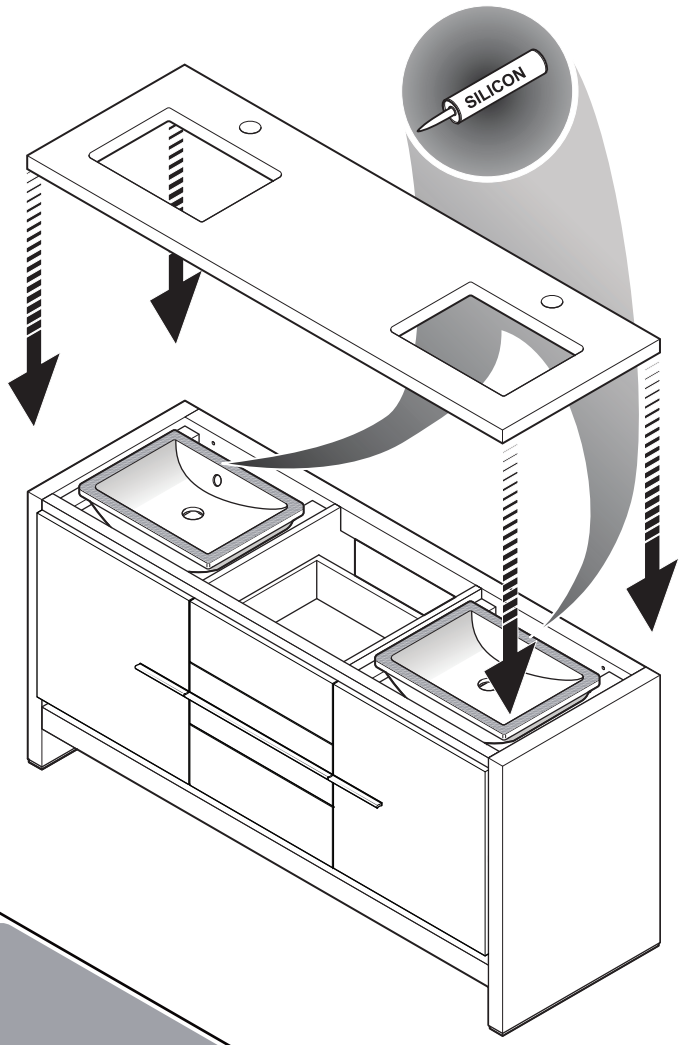

4 Install Backsplash

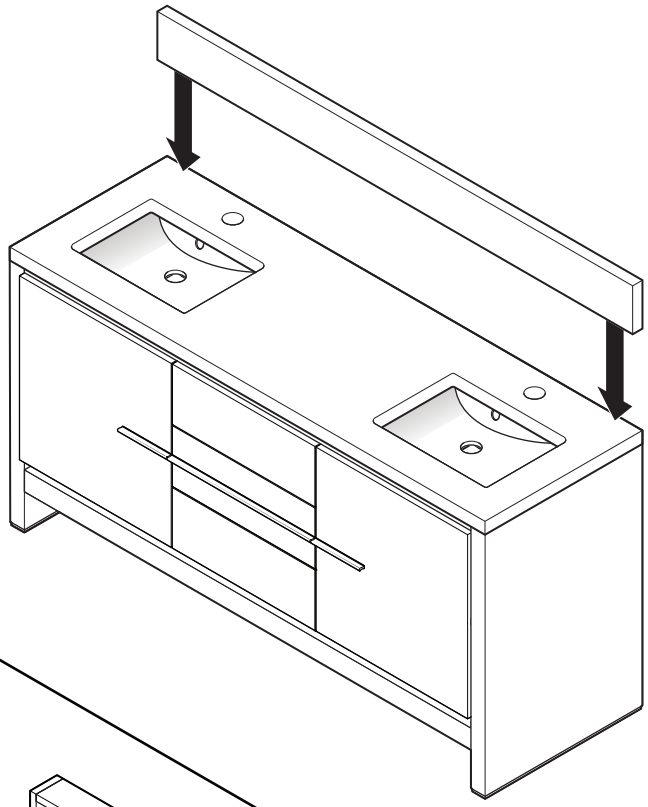

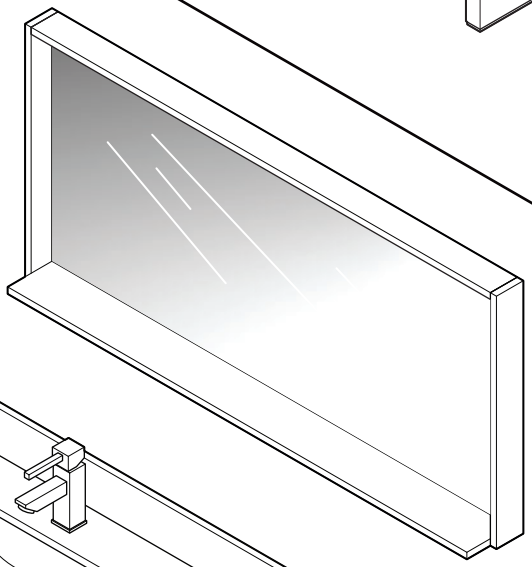

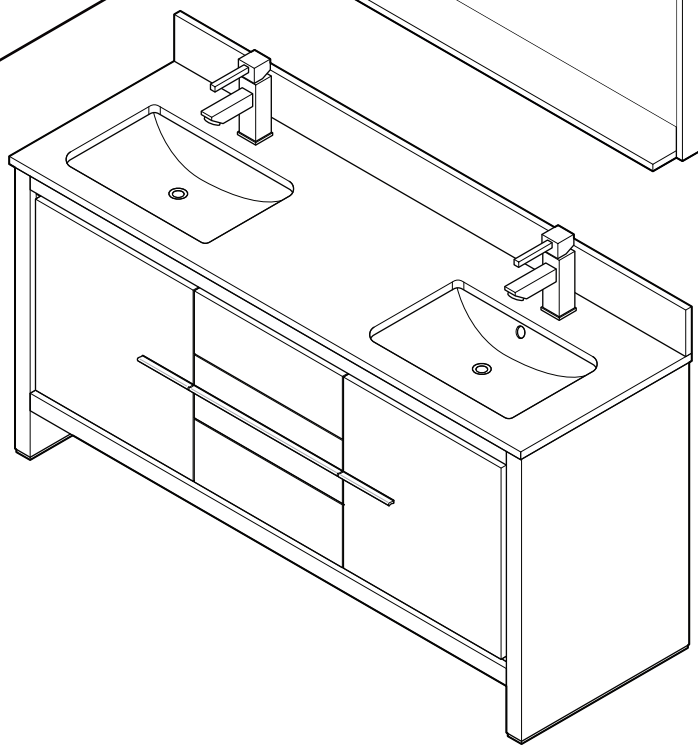

FINAL PRODUCT

FVN8119

©2015 **FRESCA** ™ All rights reserved. This material may not be reproduced, displayed, modified or distributed without the express prior written permission of the copyright holder.

P-TRAP & POP-UP

INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration

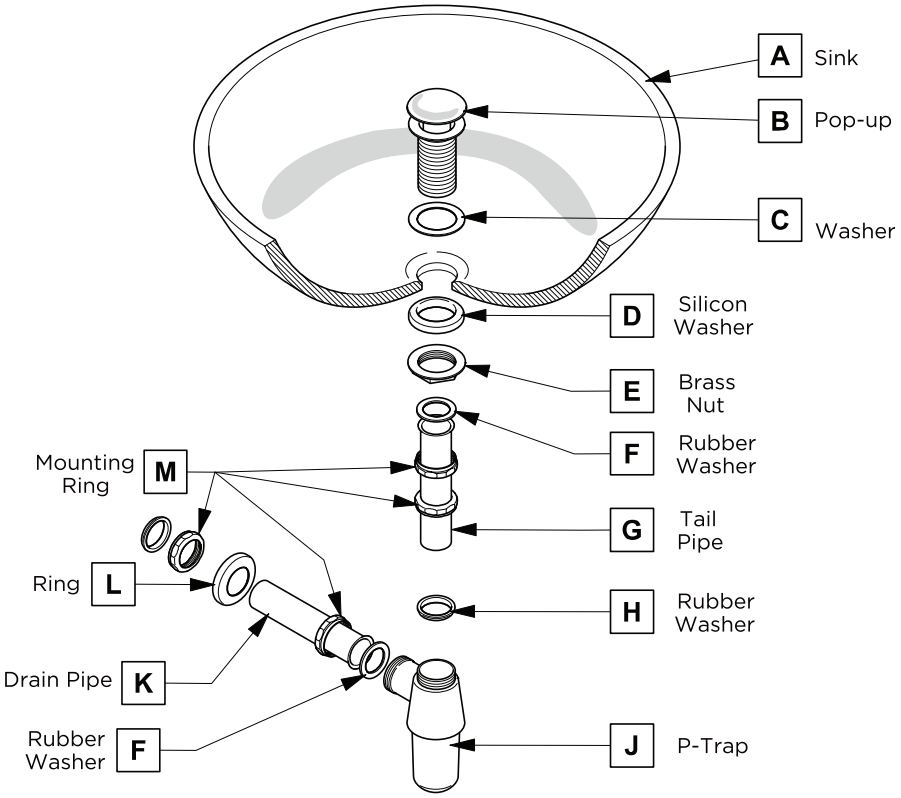

POP-UP INSTALLATION

FOR SINKS WITHOUT OVERFLOW

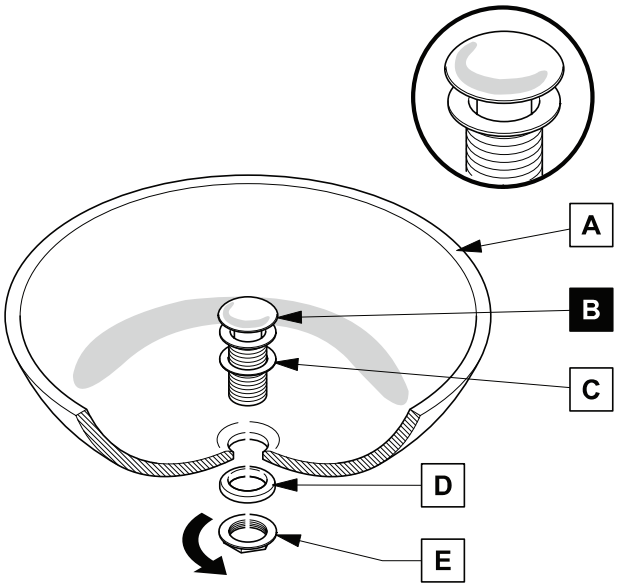

OR

FOR SINKS WITH OVERFLOW

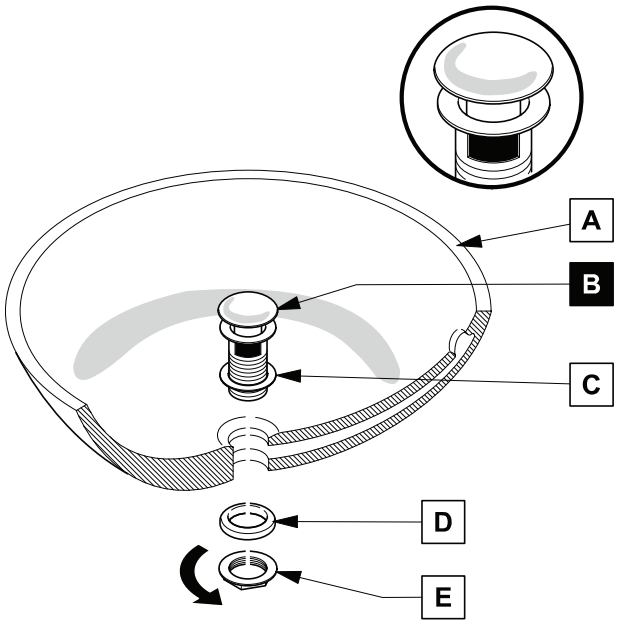

©2015 **FRESCA** ™ All rights reserved. This material may not be reproduced, displayed, modified or distributed without the express prior written permission of the copyright holder.

P-TRAP INSTALLATION

1 Install tail pipe (G)

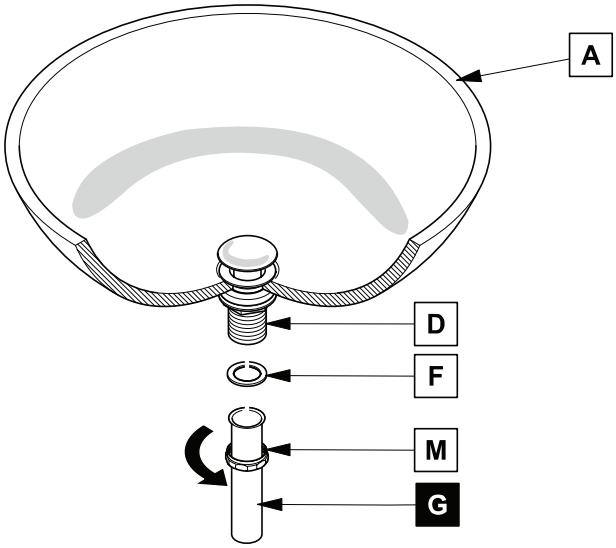

2 Install p-trap (J)

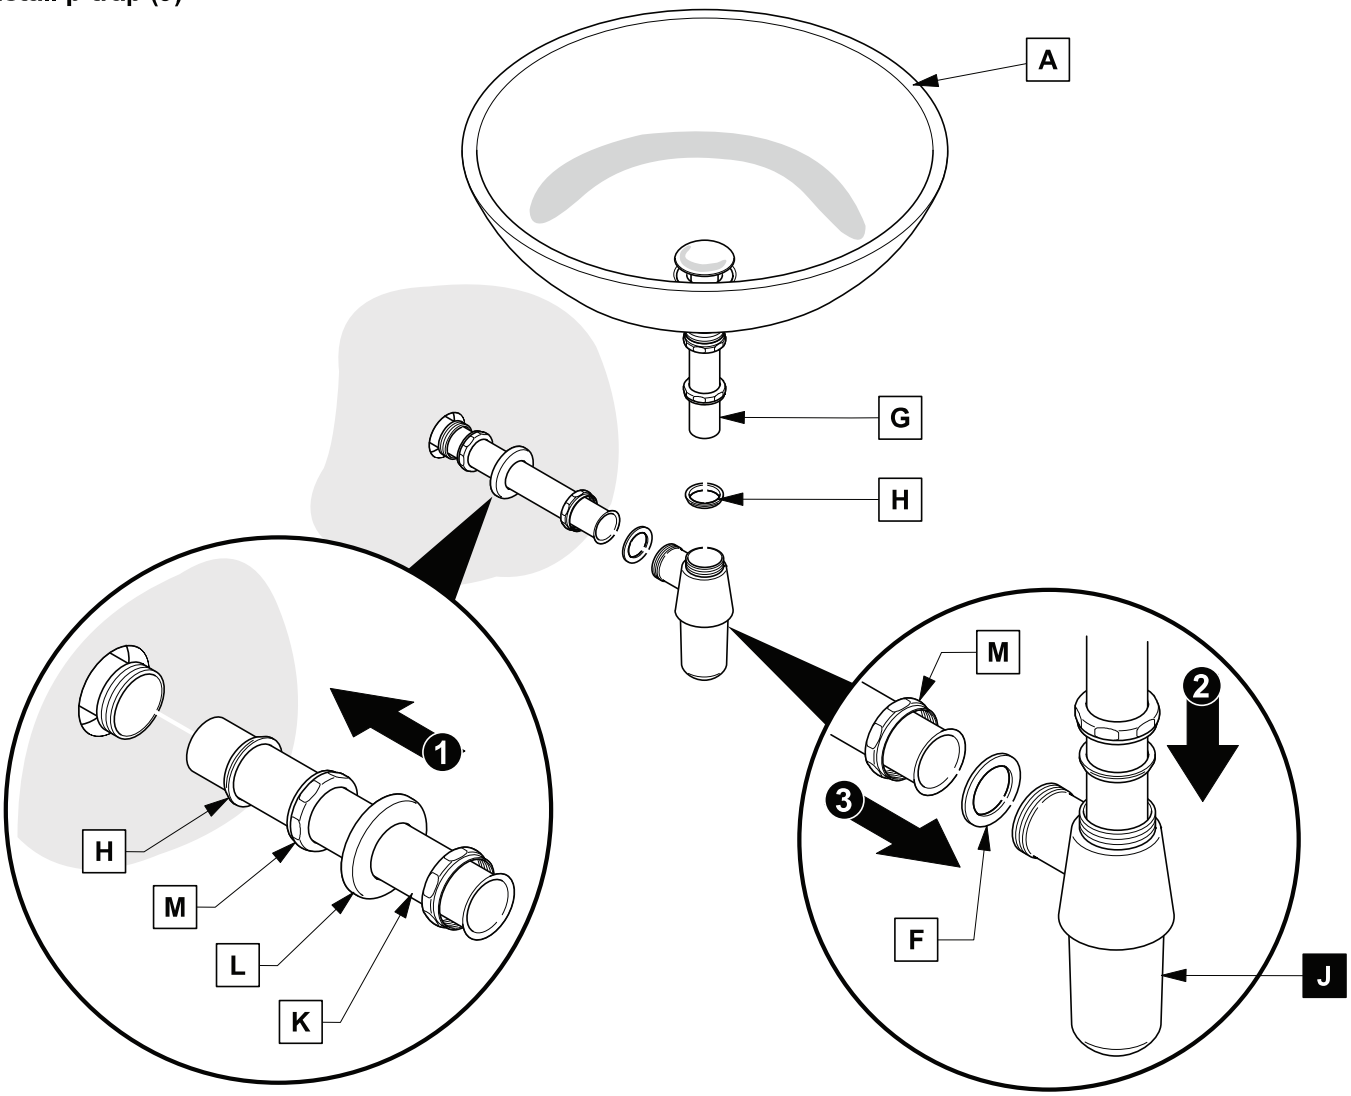

©2015 FRESCA ™ All rights reserved. This material may not be reproduced, displayed, modified or distributed without the express prior written permission of the copyright holder.